

Arduino IDE

<https://www.arduino.cc/en/Main/Software>

Bootloader brennen

Bootloader in Arduino IDE 1.6.3 brennen (f. neue AVR)

1. Werkzeuge/platine: arduino uno
2. usbasp stecken, J2 close (low speed)
3. Werkzeuge/Programmer: USBASP
4. Werkzeuge/Bootloader brennen

From:

<https://hc-ddr.hucki.net/wiki/> - Homecomputer DDR

Permanent link:

<https://hc-ddr.hucki.net/wiki/doku.php/elektronik/arduino/ide?rev=1453982323>

Last update: **2016/01/28 11:58**

